
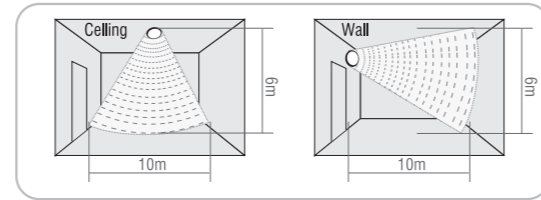


Microwave Movement Sensor

- This product is fitted with a microwave movement sensor. Please see below detailed operating instructions.

Technical Specifications:

Operating voltage	220 ~ 240 VAC 50/60Hz
Rated load	400W (Capacitive load) 800W (Resistive load)
Stand-by power	<0.5W
Sensitivity	10% / 50% / 75% / 100%
Hold-time	5s / 90s / 5min / 15min
Daylight sensor	2lux / 10lux / 50lux, disable
Microwave frequency	5.8 GHz +/- 75MHz
Transmitting power	<0.2mW
Detection range	maximum (diameter x height): 10m x 6m
Detection angle	30° ~ 150°
Working temperature	-20°C ~ 60°C

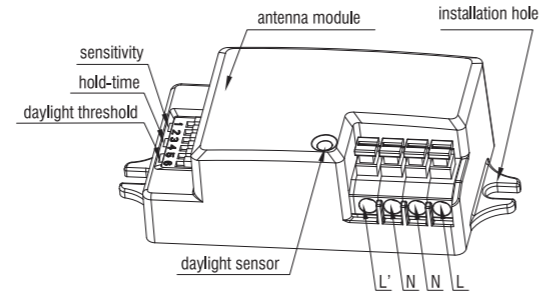

Settings:

<p>1. Sensitivity Sensitivity can be adjusted by selecting the combination on the DIP switches for different applications.</p> <p>I – 100% II – 75% III – 50% IV – 10%</p> <table border="1"> <tr> <td></td> <td>1</td> <td>2</td> <td></td> </tr> <tr> <td>I</td> <td>●</td> <td>●</td> <td>100%</td> </tr> <tr> <td>II</td> <td>●</td> <td>○</td> <td>75%</td> </tr> <tr> <td>III</td> <td>○</td> <td>●</td> <td>50%</td> </tr> <tr> <td>IV</td> <td>○</td> <td>○</td> <td>10%</td> </tr> </table>		1	2		I	●	●	100%	II	●	○	75%	III	○	●	50%	IV	○	○	10%	<p>2. Hold-time Hold-time refers to the time period that the light remains 100% on if no more movement is detected.</p> <p>I – 5s II – 90s III – 5min IV – 15min</p> <table border="1"> <tr> <td></td> <td>3</td> <td>4</td> <td></td> </tr> <tr> <td>I</td> <td>●</td> <td>●</td> <td>5s</td> </tr> <tr> <td>II</td> <td>●</td> <td>○</td> <td>90s</td> </tr> <tr> <td>III</td> <td>○</td> <td>●</td> <td>5min</td> </tr> <tr> <td>IV</td> <td>○</td> <td>○</td> <td>15min</td> </tr> </table>		3	4		I	●	●	5s	II	●	○	90s	III	○	●	5min	IV	○	○	15min	<p>3. Daylight sensor Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.</p> <p>I – Disable II – 50Lux III – 10Lux IV – 2Lux</p> <table border="1"> <tr> <td></td> <td>5</td> <td>6</td> <td></td> </tr> <tr> <td>I</td> <td>●</td> <td>●</td> <td>Disable</td> </tr> <tr> <td>II</td> <td>●</td> <td>○</td> <td>50Lux</td> </tr> <tr> <td>III</td> <td>○</td> <td>●</td> <td>10Lux</td> </tr> <tr> <td>IV</td> <td>○</td> <td>○</td> <td>2Lux</td> </tr> </table>		5	6		I	●	●	Disable	II	●	○	50Lux	III	○	●	10Lux	IV	○	○	2Lux
	1	2																																																												
I	●	●	100%																																																											
II	●	○	75%																																																											
III	○	●	50%																																																											
IV	○	○	10%																																																											
	3	4																																																												
I	●	●	5s																																																											
II	●	○	90s																																																											
III	○	●	5min																																																											
IV	○	○	15min																																																											
	5	6																																																												
I	●	●	Disable																																																											
II	●	○	50Lux																																																											
III	○	●	10Lux																																																											
IV	○	○	2Lux																																																											

Trouble shooting:

Malfunction	Cause	Remedy
The light will not come on	Incorrect light-control setting selected	Adjust daylight threshold setting
	Faulty lamp	Replace lamp
	No power supply	Check power to sensor
The lamp is always on	Continuous movement in the detection zone	Check detection area setting
The lamp is on without any identifiable movement	The sensor is not mounted for reliably detecting movement	Securely mount enclosure
	Movement occurred, but not identified by the sensor (Movement behind wall, movement of small object in immediate lamp vicinity etc.)	1. Reduce sensitivity. 2. Check the movement behind walls to avoid facilities such as water pipe, fan, which may mis-trigger the sensor.
The lamp will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small.	Check detection area setting

Care and Safety

- We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish.
- For your safety, always switch off the power supply before cleaning.

Instruction leaflet

Seran MW Wall

78607, 78608, 78609, 78610



78607



78608



78609



78610



saxby lighting

Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

Warning

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all of the parts listed.

To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a fused circuit.

If replacing an existing fitting, make a careful note of the connections.

Cables must be protected using suitable conduit or plastic trunking.





The mains supply cable must have a minimum cross sectional area of 1.0mm².

This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard and masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).

If mounting, note the position of the "This Way Up" label on the back of the product and ensure it is correctly oriented.


Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Technical data

Supply Voltage:	240V~, 50 Hz
Bulb Type:	12W LED module - 6000K
	Conformity with all relevant EC Directive requirements.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.
	The power supply is Double Insulated and does not require connection to an Earth circuit.
	This product is not suitable for dimming.
IP65	This product is rated at IP65.

Layout

- Plan the desired layout of these fittings carefully, ensuring the cables will reach the distances each light fitting.
- Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.
- Suitable for indoor and outdoor use.
- If this unit is being fitted in a room containing a bath or shower, a 30mA RCD must be used - in accordance with IEE regulations.
- This product is suitable for use in living areas, Bathroom Zone 2 and outsidess of zones.

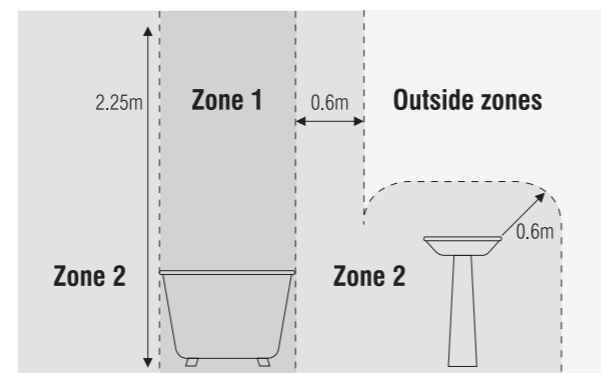


Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, **carefully note the position of each set of wires.**

- Note that the switch is turned off before installation.
- Undo screws and remove diffuser.
- Drill holes in the back of your fitting for your fixing screws, take care and drill gently to ensure a clean hole through. Use a drill bit sized appropriately to your fixing screws (not supplied).
- Using the back of your fitting as a template, mark the position of your fixing holes on your mounting surface.
- Prepare the holes in your mounting surface as appropriate for your fixings.
- Pierce the rubber grommet in the back of your fitting making a hole just large enough to make a tight fit around the incoming mains cable.
- Thread the cable through the grommet and offer the fitting to the ceiling / wall.
- Secure the fitting in place. Note, if protection against ingress of moisture is required, the heads of screws must be covered with a silicone or similar sealant.
- Check that the grommet is still correctly fitted in the cable entry hole and around the incoming cable.
- Make the electrical connections to the gear tray according to the symbols, adjacent to the connector block, Brown to live (L) Blue to neutral (N). **See Wiring**
- Restore the power and switch on.

Wiring

- This product is double insulated and must not be earthed. If there are any incoming earth cables, they must be joined together and well insulated with good quality insulation tape. This is to ensure earth continuity throughout your property.
- Having correctly identified the wiring from your existing light fitting, connect to the quick fit connection block in the following way:

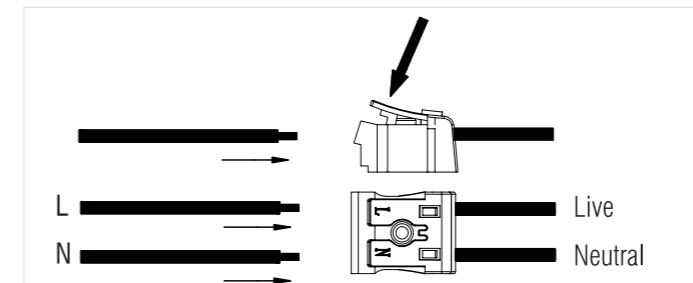

Check that...

- You have correctly identified the wires.
- The connections are tight.
- No loose strands have been left out of the terminals.